


CoilOver Stud Top Assembly

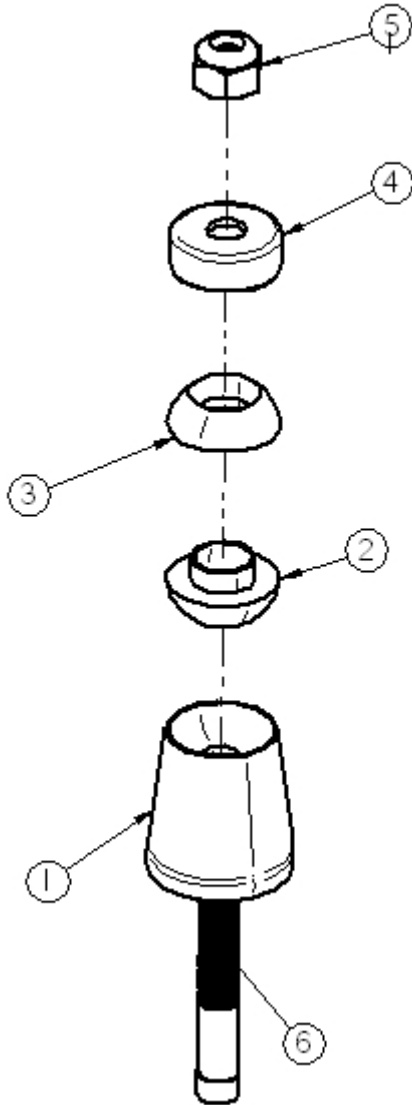

1. Slide aluminum Stud Top Base (1) over Threaded Stud (6).
2. Slide bottom Delrin Ball Half (2) over threaded stud, with step facing up.
3. Place CoilOver into spring pocket with stud protruding through factory shock hole. Factory shock hole may need to be drilled out to $\frac{3}{4}$ ".
4. Place upper Delrin Ball Half (3) over threaded stud, flat side down.
5. Secure the assembly with the Aluminum Cap (4) and 12mm Nylok Nut (5).