



350 S. St. Charles St. Jasper, In. 47546
Ph. 812.482.2932 Fax 812.634.6632

www.ridetech.com

Part # 11339000
63-72 Chevy C-10 Rear Panhard Bar Kit

Components:


1	90000977	Panhard bar C-C 23 7/16"
1	90001589	Kevlar lined heim end
1	90001942	Rubber rod end – pressed into panhard bar
1	90000628	Panhard bar axle mount
1	90000632	Panhard bar stud
1	90000633	Panhard bar stud spacer

Hardware:

1	99752004	3/4" SAE jam nut	Heim end
1	99621001	5/8" x 1" SAE Gr. 8 bolt	Panhard bar stud to aluminum bracket (Use loc-tite)
1	99623001	5/8" SAE flat washer	Panhard bar stud to aluminum bracket
1	99621003	5/8" x 2 3/4" SAE Gr.8 bolt	Panhard bar to frame
2	99632002	5/8" SAE Nylok jam nut	Panhard bar & stud
5	99311007	5/16" x 1 3/4" USS bolt	Panhard bar axle bracket to axle cover
5	99313003	5/16" lock washer	Panhard bar axle bracket to axle cover
5	99313002	5/16" USS flat washer	Panhard bar axle bracket to axle cover

STRONG ARMS™

by Air Ride Technologies

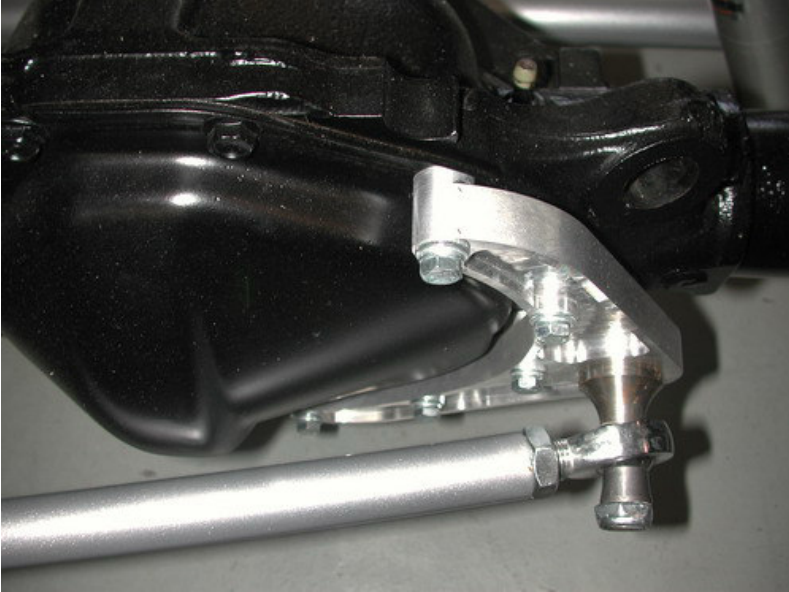

1. To install the panhard bar remove 5 bolts from the right half of the axle cover. Place the panhard axle bracket over the cover and secure with 5/16" x 1 3/4" bolts, flat washers and lock washers.

2. Slide the heim end over the stud and then the spacer. Secure the assembly with a 7/16" Nylok nut.

3. The other end of the panhard bar will bolt into the factory mount with a 5/8" x 2 3/4" bolt and Nylok jam nut supplied.

ridetech
Air Ride Technologies