




350 S. St. Charles St. Jasper, In. 47546 Ph. 812.482.2932 Fax 812.634.6632
on the internet: www.ridetech.com

SWA6100 64-72 GM "G" Body Rear MuscleBar

- 1 Rear sway bar
- 4 7/16" x 3" bolts
- 4 7/16" Nylok nuts
- 8 7/16" flat washers

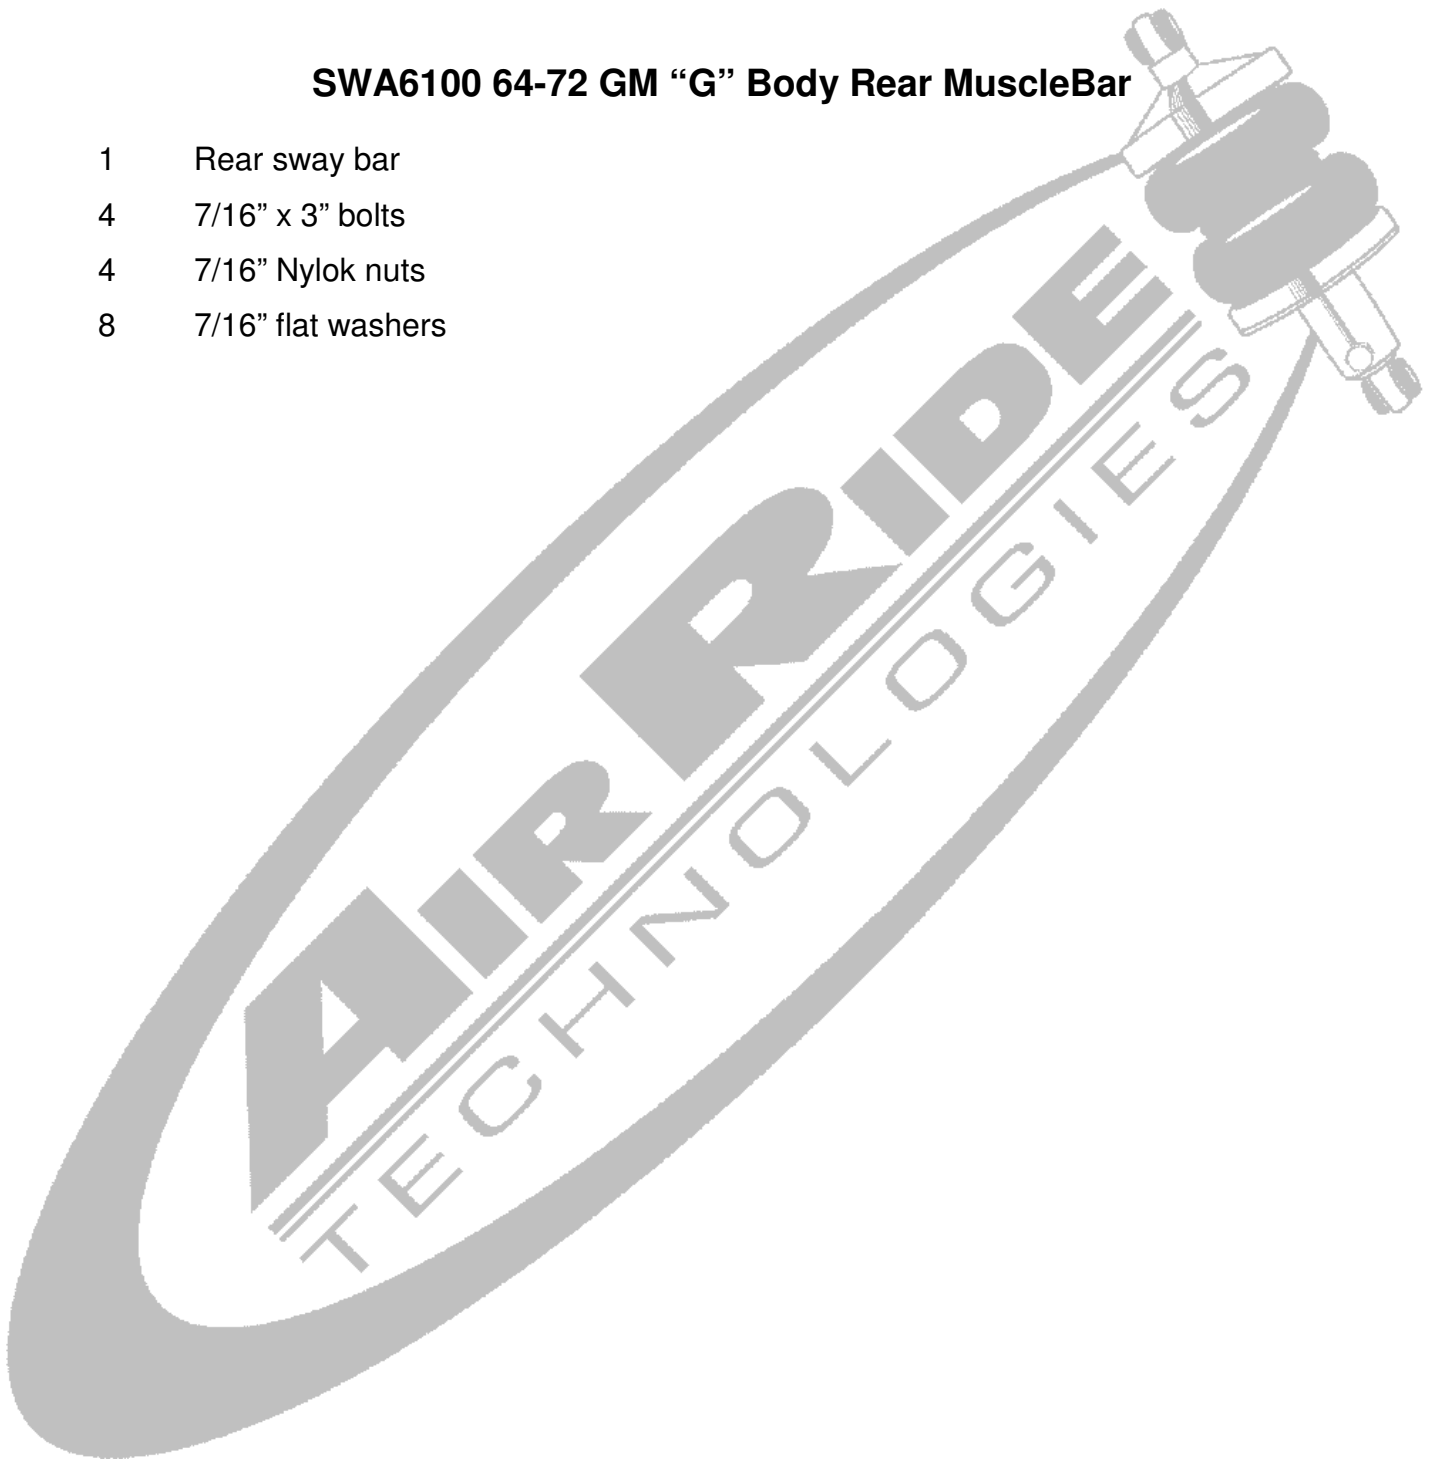

Rear Bar Installation

1. Look at the current sway bar installation.
2. Support the vehicle by the frame with lift jacks or jack stands, allowing the suspension to be unsupported.
3. Remove the four bolts holding the sway bar to the trailing arms.
4. Remove the factory sway bar from the vehicle.
5. Place the new swaybar up to the trailing arms and push the bolts through the sway bars.
6. Tighten up the new bar.
7. Double check that all fasteners are tightened.

Your installation is finished. Enjoy your new sway bars!

