



350 S. St. Charles St. Jasper, In. 47546 Ph. 812.482.2932 Fax 812.634.6632
on the internet: www.ridetech.com

**SWA7800 63-87 C-10 Front MuscleBar
(For use with StrongArms only)**

- 1 A869-1 Sway bar (includes the following)
 - 2 Polyurethane frame bushing
 - 2 Frame bushing bracket
- 2 BAL1029 90 degree swivel end link
- 2 BAL1030 Straight swivel end link
- 4 12mm Nylok Jam nuts for swivel end links
- 2 12mm x 1 3/4" all thread to attach swivel end links (use Loctite)
- 8 7/16" flat washers for end links
- 4 3/8" x 1 1/4" USS bolt for frame bracket
- 4 3/8" USS Nylok nut
- 8 3/8" SAE flat washer




MUSCLEbar™

by Air Ride Technologies


SWA7800 Installation Instructions

1. This sway bar is designed for use with Air Ride Technologies lower StrongArms. It will not work with other arms without modification.
2. Remove the factory sway bar. On trucks with a factory sway bar you will have to remove the sway bar frame mount.

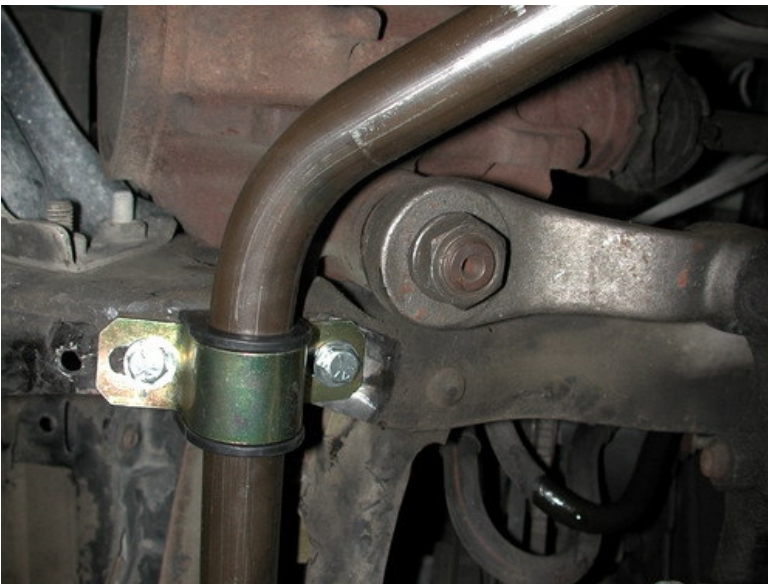

3. For 73-87

Bolt the new MuscleBar to the frame rail using the poly bushing and bracket. The rear hole for the factory sway bar mount will be reused for the rear hole in the new bracket. The front hole must be drilled with a 3/8" bit. Four 3/8" x 1 1/4" bolts, Nylok nuts, and eight flat washers will secure it to the frame.

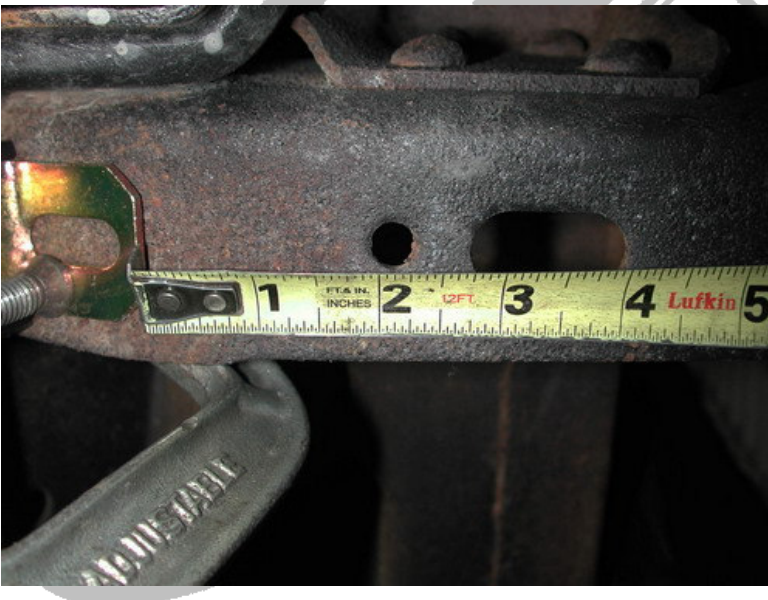

4. For 63-72

Clamp the mount 2 3/4" behind the oval hole in the bottom of the frame. Both of the holes for the sway bar mount must be drilled with a 3/8" bit. Secure the mount with four 3/8" x 1 1/4" bolts, Nylok nuts and flat washers.



4. Install the end link to the sway bar and lower arm as shown in the picture. It will be fastened with 12mm jam nuts and flat washers.

