




Part # 12099120 - 1964-1966 Mustang Front SwayBar

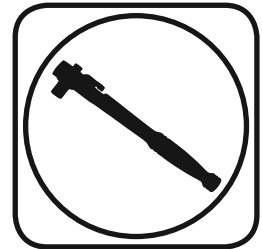

Recommended Tools



1964-1966 Mustang Front SwayBar Installation Instructions

Table of contents

- Page 2..... Included components and Hardware List
- Page 3..... SwayBar Installation
- Page 4..... SwayBar Installation





Major ComponentsIn the box

Part #	Description	QTY
90002638	Front SwayBar	1
90002570	End Link Kit	1
70012402	Delrin Sway Bar Bushing Liner	2
90002572	Bushing Strap	2
90002539	SwayBar Bushing	2

Part #	Description	Usage	QTY
99371003	3/8" -16 x 1" Hex Bolt	Bushing Strap to Frame Mount	4
99373003	3/8" Flat Washer	Bushing Strap to Frame Mount	4
99372002	3/8" -16 Nylok Nut	Bushing Strap to Frame Mount	4

Getting Started.....

Install all Front StreetGrip Components before installing the SwayBar.

Remove the OEM Swaybar to prepare for the StreetGrip SwayBar installation.

This SwayBar kit utilizes a Delrin Liner in the SwayBar Bushing. The Delrin Liner allows the Swaybar to move freely and quietly in the Bushing. The Delrin is self-lubricating, no lubrication is required.



1. The Delrin Liner is split on one side to ease installation. We found it easier to install by, opening up the Liner enough to slide it onto the end of the SwayBar, then sliding it into position. It will open up and slide over the curves in the Bar. Install a Liner on each side of the SwayBar in the approximate location they will need to be when installing the SwayBar on the Car.

Note: The Delrin is self-lubricating, no lubricant is needed.

www.ridetech.com
812-482-2932




SwayBar Installation



2. Open up the Poly SwayBar Bushings and install them over the Delrin Sleeves.



3. Install Bushing Straps Over the Poly Sway-Bar Bushings.

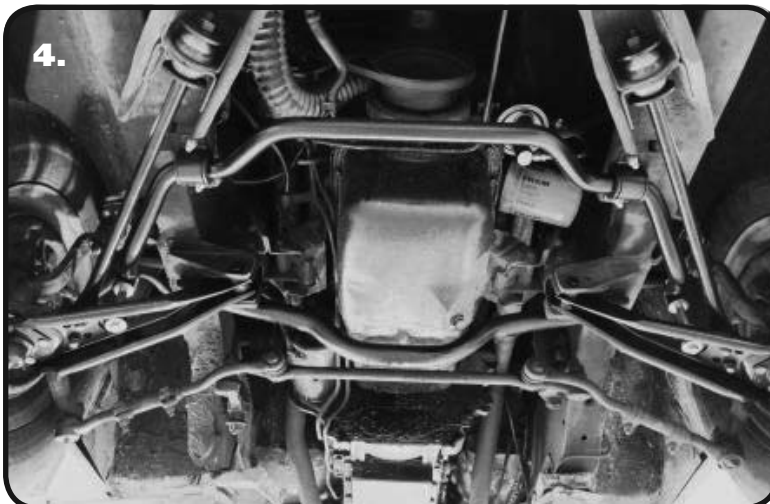


4. Slide the SwayBar into position on the Car. The SwayBar Arms will be above the Control Arms. Install a 3/8" Flat Washer on (4) 3/8"-16 x 1" Hex Bolts. A Bolt/Washer will go in each of the 4 mounting holes. With the Bolt/Washers installed, install a 3/8" Flat Washer on the threads followed by a 3/8"-16 Nylok Nut. Do **NOT** Completely tighten the Hardware. It will be left partially loose until the End Links are installed.



SwayBar Installation

5.

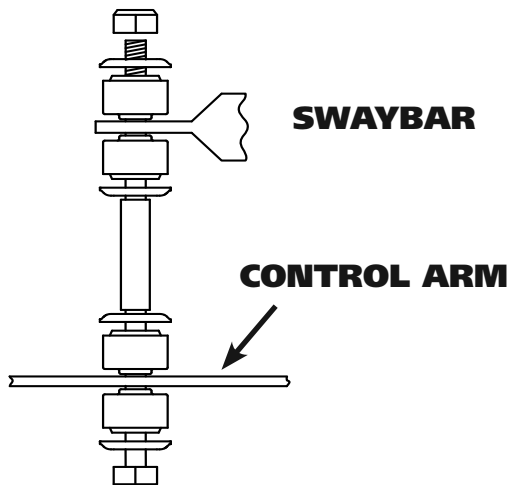

5. Install the End Links. Use **(Figure 5)** for proper installation. Tighten the Hex Nut enough to **slightly** compress the Bushings.

6. Tighten the Sway Bar Mounting Hardware.