



350 S. St. Charles St. Jasper, In. 47546
Ph. 812.482.2932 Fax 812.634.6632
www.ridetech.com


Part # 11054499
58-64 Impala Rear Lower StrongArms
For Use with CoolRide

Components:

2	90000466	Lower control arm w/ air spring mount
4	90001085	Poly bushing half – 1.5" O.D x 1.5" long
4	90001086	Poly bushing half – 1.5" O.D. x 1" long
4	90000467	Bushing sleeve – 2.5" long

Hardware:

4	99621005	5/8" x 3 1/2" SAE Gr.8 bolt	Lower arm
4	99632002	5/8" SAE Nylok jam nut	Lower arm

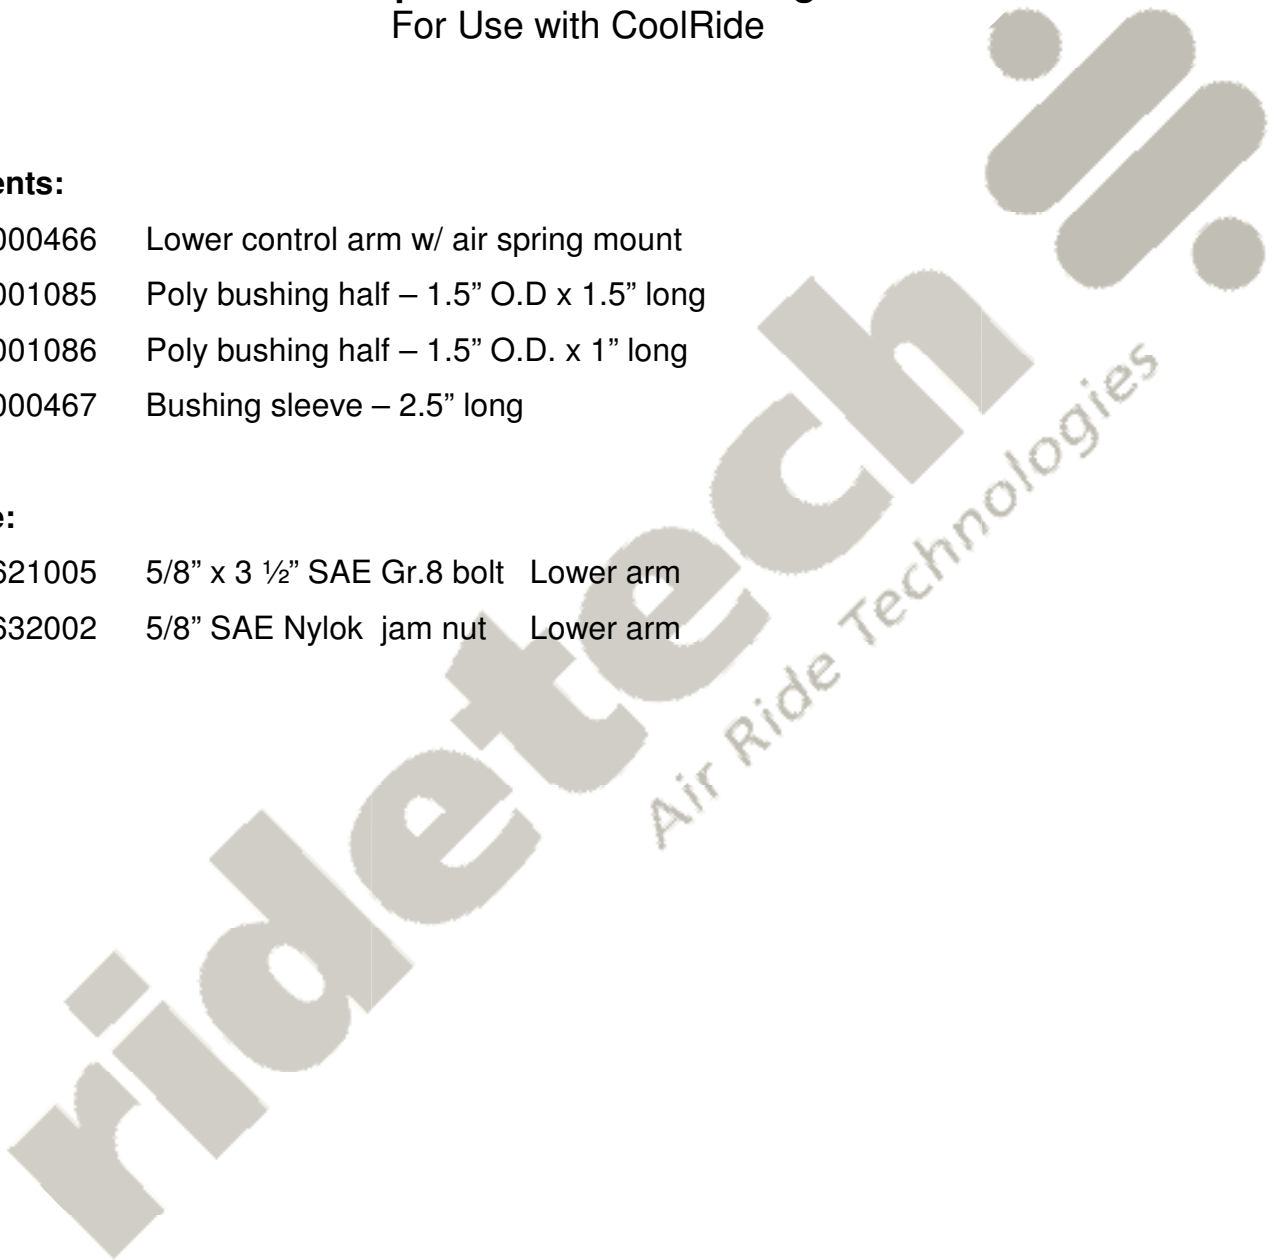


STRONG ARMS™

by Air Ride Technologies

Installation Instruction

1. Raise and support vehicle at a safe and comfortable working height.

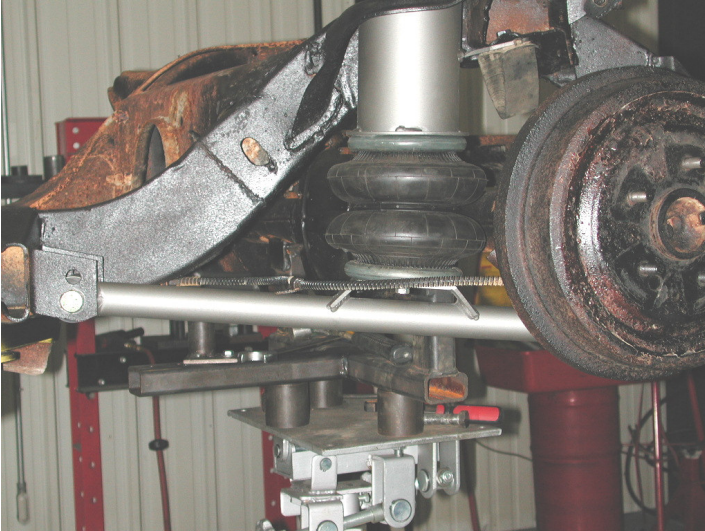

2. Fasten the lower StrongArms to the frame and axle using the 5/8" x 3 1/2" bolt and Nylok nuts supplied.

3. Thread the 3/8" x 3/4" bolt with washer and lock washer about half way into the air spring. Slide bolt into slot on lower arm and tighten.

Note: Do one side at a time to keep axle from rotating.

ridetech
Air Ride Technologies