



350 S. St. Charles St. Jasper, In. 47546

Ph. 812.482.2932 Fax 812.634.6632

www.ridetech.com

Part # 11054499

58-64 Impala Rear Lower StrongArms

For Use with CoolRide

Components:

2	90000466	Lower control arm w/ air spring mount
4	90001085	Poly bushing half – 1.5" O.D x 1.5" long
4	90001086	Poly bushing half – 1.5" O.D. x 1" long
4	90000467	Bushing sleeve – 2.5" long


Hardware:

2	99621006	5/8" x 3 3/4" SAE Gr.8 bolt	Lower arm
4	99622006	5/8" SAE Nylok jam nut	Lower arm
6	99623001	5/8" SAE Flat Washer	Lower arm

STRONGARMS

Installation Instruction

1. Raise and support vehicle at a safe and comfortable working height.

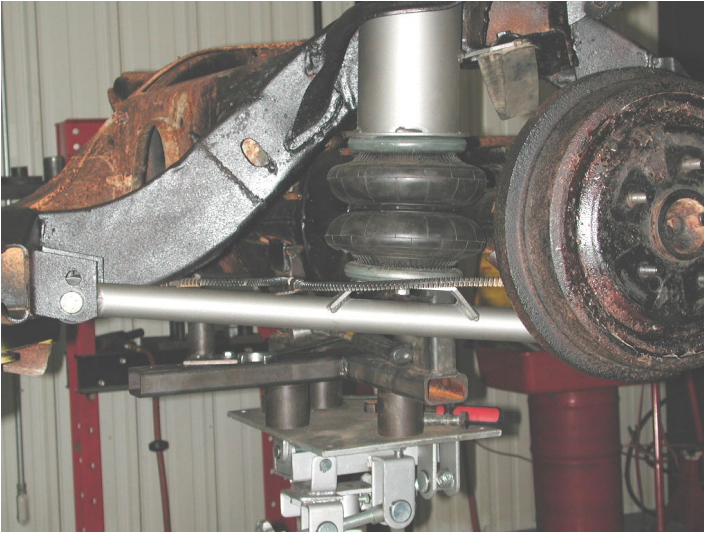

2. Fasten the lower StrongArms to the frame and axle using the 5/8" x 3 3/4" bolt, flat washers, and Nylok nuts supplied on the front. The OEM rear bolt will be reused in conjunction with the supplied flat washer and Nylok nut.

3. Thread the 3/8" x 3/4" bolt with washer and lock washer about half way into the air spring. Slide bolt into slot on lower arm and tighten.

Note: Do one side at a time to keep axle from rotating.